

WISE

FLIP-FLOP SEAT ASSEMBLY QUALITY PLASTIC FRAME PONTOON SEATING


A

- You will have one carton containing a seat cushion, base, 2 brackets, 2 aluminum flat bars and a backrest.
- The only tool needed is a Phillips head screwdriver.
- Take the square aluminum tube with 2 holes in the end and attach it to both sides of the backrest with the 4-1/4" x 2" screws provided.

**Questions? Missing Parts?
Call 800-759-5769**

B

- Attach the brackets to the side of the base with the 4-1/4" x 3/4" screws provided.
- Slide the backrest bars into the brackets located on each end of the base.
- Place washer between the tubing and vinyl on base.
- Slide screw through the tubing and washer into the pre-punched hole.
- Tighten screw and repeat on the other side.

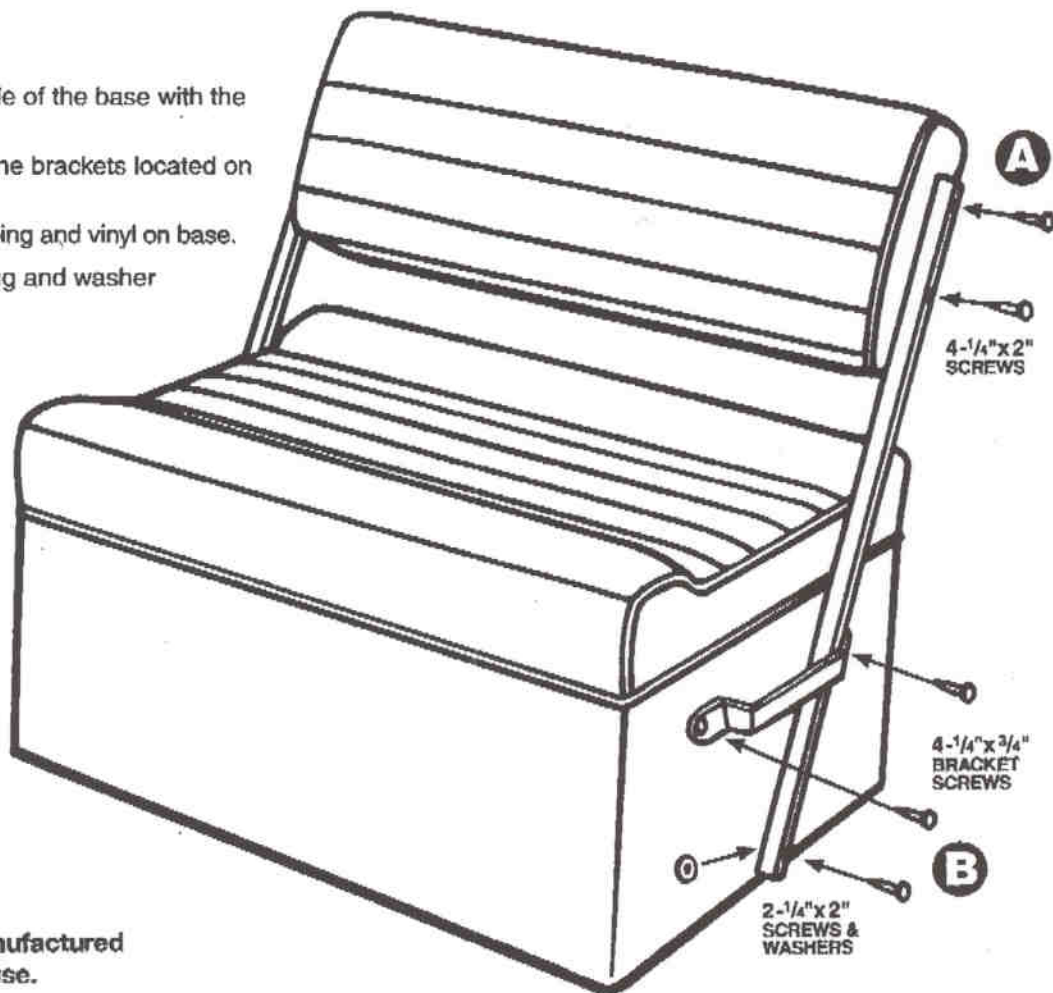

Above items are not manufactured
for commercial use.

THE WISE COMPANY

WF 1031

472 9th St. Rector, AR 72461
TOLL FREE TEL: (800) 759-5769

www.wisesats.com

MANUFACTURERS OF QUALITY MARINE SEATING SINCE 1960

03.29.05